



Installation Guidance


Connolly Biscuit Plate Dowels

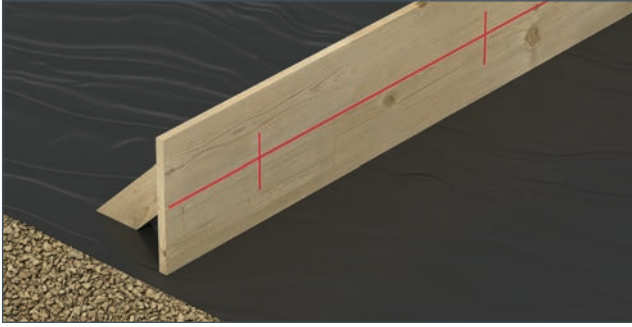

Step 1
Mark centre line of the biscuit plate dowel and dowel spacing on the formwork.

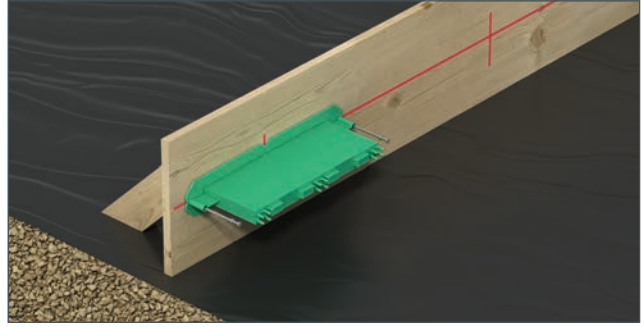

Step 2
Place the Biscuit Dowel Sleeve at the marked location by using the V-notches at the top and bottom and both sides to ensure correct placement.

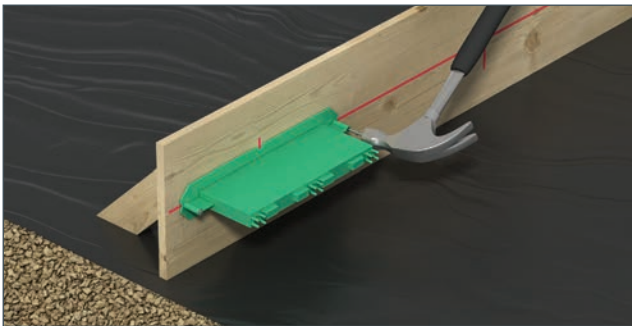

Step 3
Nail the Biscuit Dowel Sleeve to the formwork using the pre-installed nails.



Step 4
After pouring the first slab remove the formwork. After removal of formwork, the Biscuit Dowel Sleeve will be exposed as shown above.



Step 5
Firmly place the Biscuit Plate Dowel into the insertion hole in the sleeve by punching through the sticker as shown above.



Step 6
Once plates have been correctly positioned, install the specified reinforcement and carry out the next pour. (For expansion joints, install compressible material before second pour)